

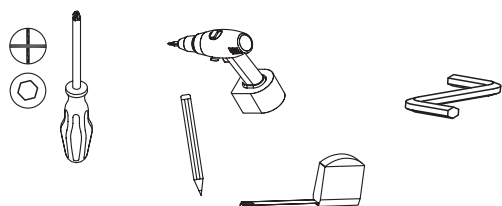
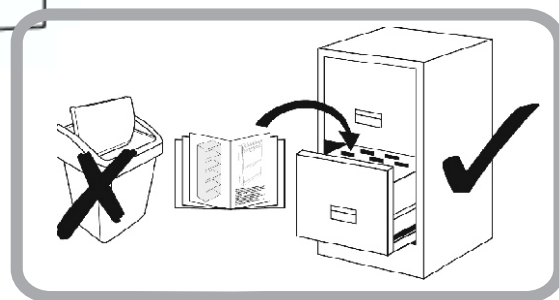
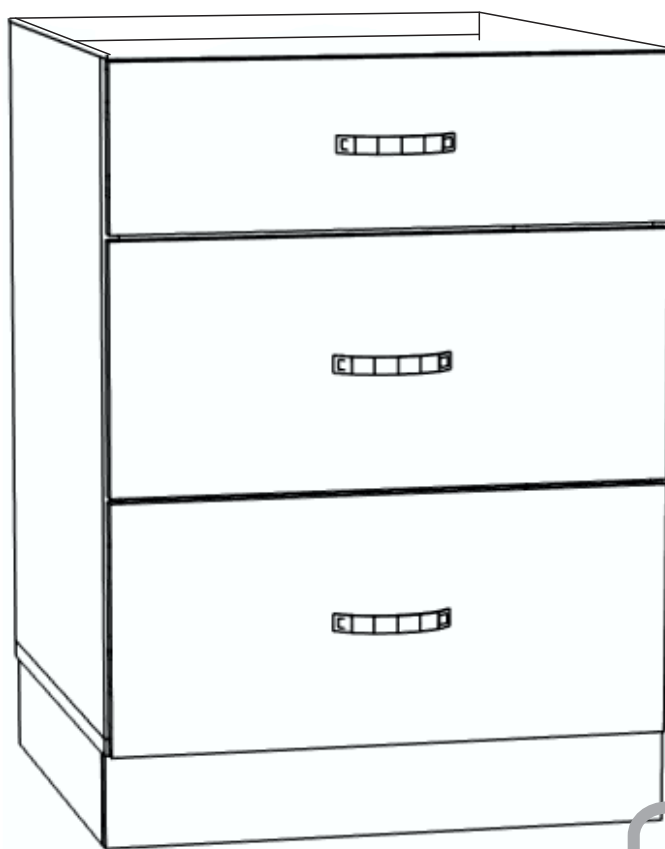
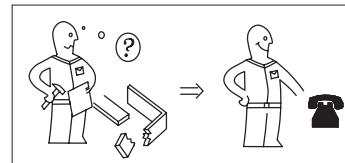
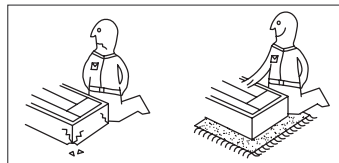
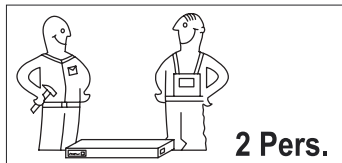


ANA 03

05860075 / 05

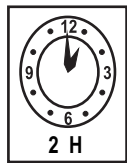

festziehen / tighten / Затягивать /
serrer / stringere / utåhnut / vasttrekken /
zategnuti / strângere / zwiázac / zacisn'æ
szorosan meghúzni / pevne dotiahnut' /
trdno pritegniti / затянуть / dra et

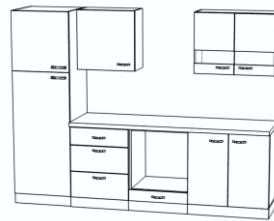

eindrücken / press in / enfoncer / wcisnąć
ribattere / zatlačit / Вкарайте / indrukken
benyomni / stlačit' / vtisniti / tryck in
introducere prin apăsare / вдавить



ausmessen / measure / mesurer /
misurare / opmeten / izmeriti / mîara /
kimérni / izmeriti / mäsurare / измерить
změřit / Измерете / mät upp / zmierzyc





drücken / press / presser / stisknout /
Натиснете / vtisniti / nasinac / drukken /
pritisnuti / nacinac / pritisniti / нажать /
(meg)nyomni / apăsare / tryck fast / nacinac






einschlagen / hammer in / beverni / sla in
frapper au marteau / infossare / Zabit' /
zarazit / Набийте / zabiti / wbić
introducere prin bătaie / забить / zatlouct



Drehen - wenden / przekrećić - odwrócić /
Keren - omdraaien / Girare - Ruotare /
Okrenuti - ubrnuti / Retourner - renverser /
Turn over - turn around / Otočte - obratite /
Завъртете - обърнете / Obrnite list /
Întoarceți - roțiți / Vrid runt - vänd /
прокрутить - повернуть / otočit - obrátit
elforgatni - megfordítani

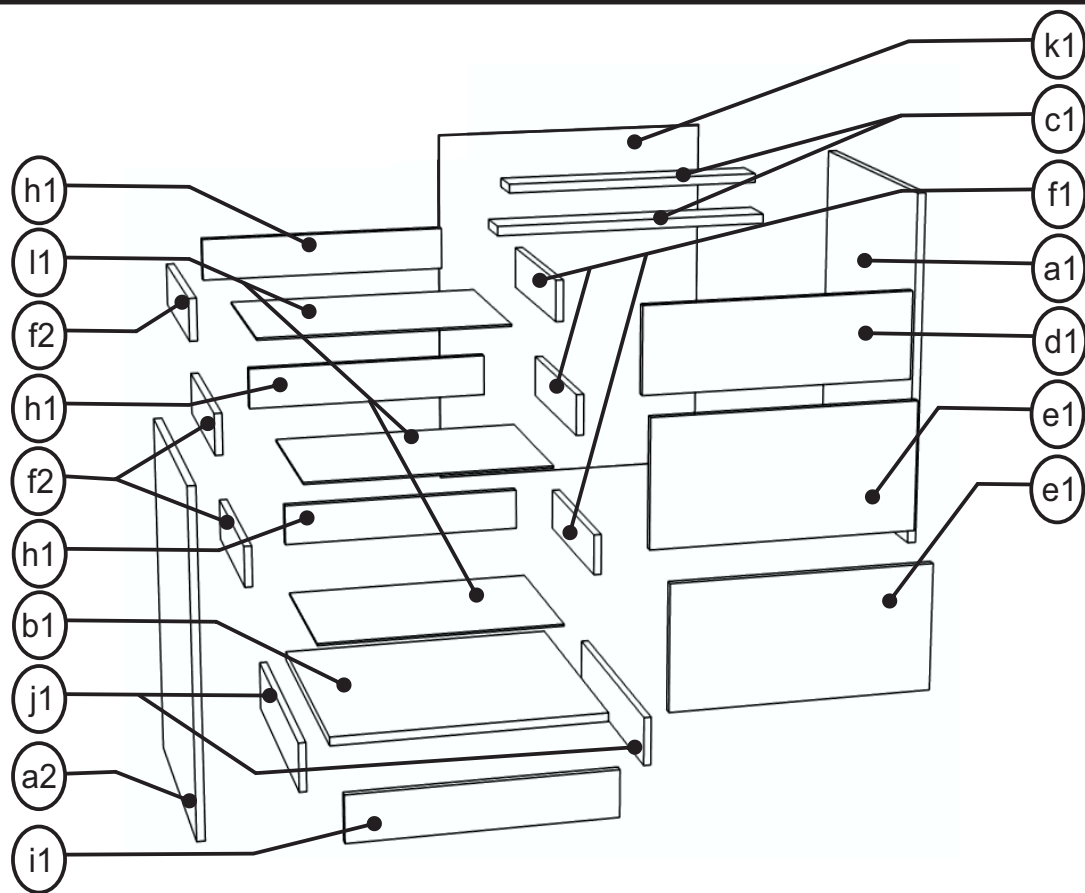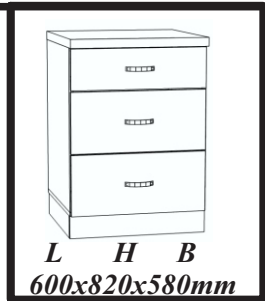


				
1	a1	704mm x 556mm x 16mm	1	3/9
2	a2	704mm x 556mm x 16mm	1	3/9
3	b1	600mm x 556mm x 16mm	1	3/9
4	c1	568mm x 80mm x 16mm	2	3/9
5	d1	176mm x 596mm x 18mm	1	3/9
6	e1	264mm x 596mm x 18mm	2	3/9
7	f1	350mm x 80mm x 16mm	1	3/9
8	f2	350mm x 80mm x 16mm	3	3/9
9	h1	510mm x 80mm x 16mm	3	3/9
10	i1	600mm x 95mm x 16mm	1	3/9
11	j1	520mm x 95mm x 16mm	1	3/9
12	k1	711mm x 582mm x 3.7mm	1	3/9
13	l1	355mm x 540mm x 3.7mm	3	3/9






1  $\varnothing 15 \times 12 \text{ mm}$ x6	2  $\varnothing 6 \times 45/34 \text{ mm}$ x6	3  $\varnothing 3.5 \times 16 \text{ mm}$ x70	4  $\varnothing 8 \times 35 \text{ mm}$ x12	5  $\varnothing 7 \times 50 \text{ mm}$ x14
11  $M4 \times 20 \text{ mm}$ x6	12  x4	13  x6	33  $3.5 \times 30 \text{ mm}$ x4	IMBUS  4mm x1
24\RL  350 mm x1	24\DL  350 mm x1	24\CR  350 mm x1	24\CL  350 mm x1	69  $9 \times 20 \times 100 \text{ mm}$ x6
45  $\varnothing 8 \times 1 \text{ mm}$ x3	46  $\varnothing 15 \text{ mm}$ x6	86  128mm x3		




0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190







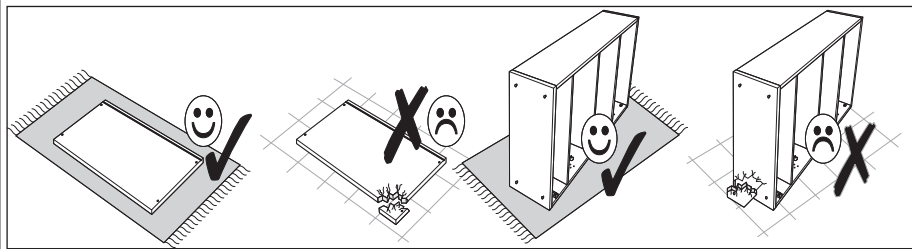


3 Ø3.5x16mm x26	4 8x35mm x8	24C/R 350 mm x1	24C/L 350 mm x1
12 x4	7 x2		

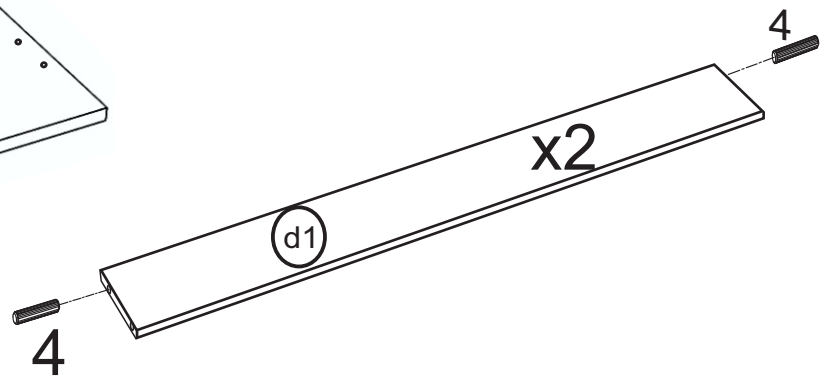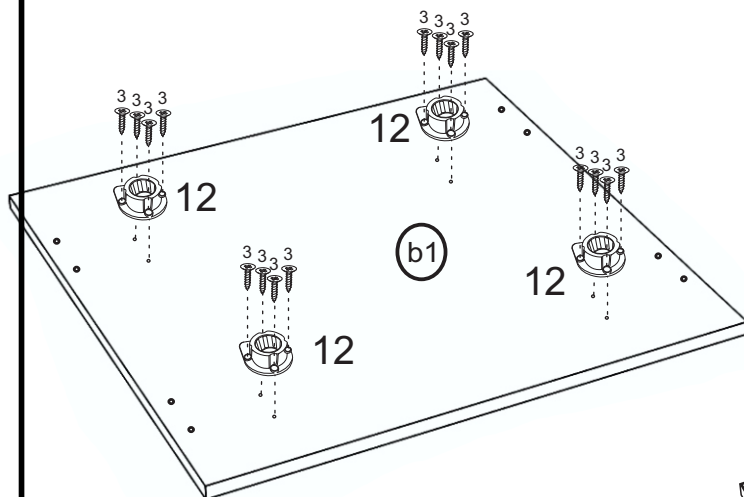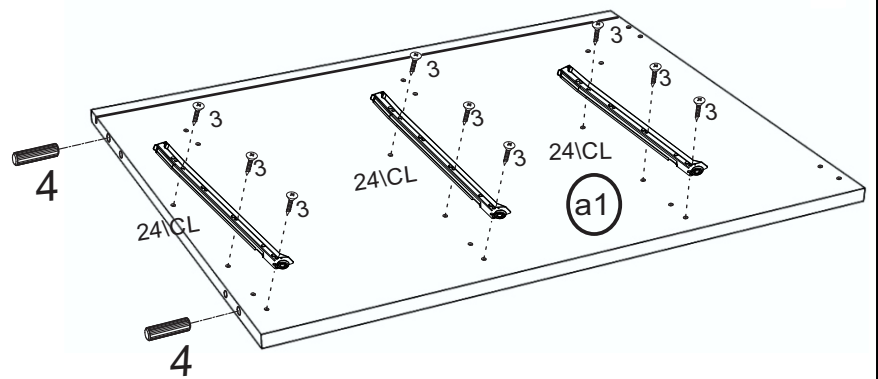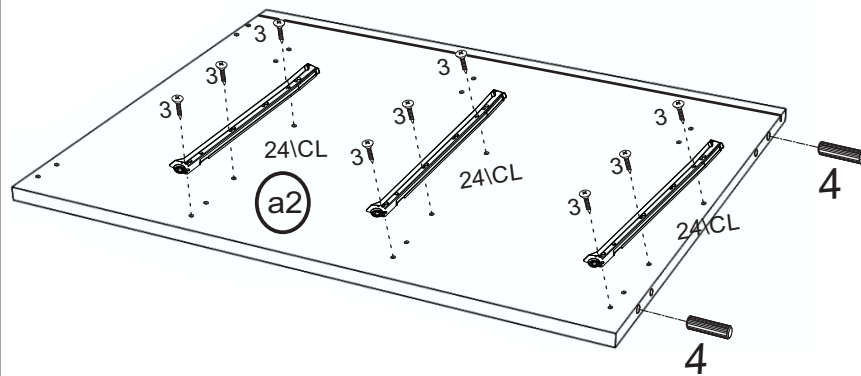
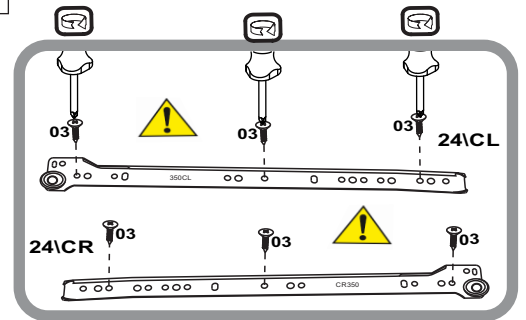


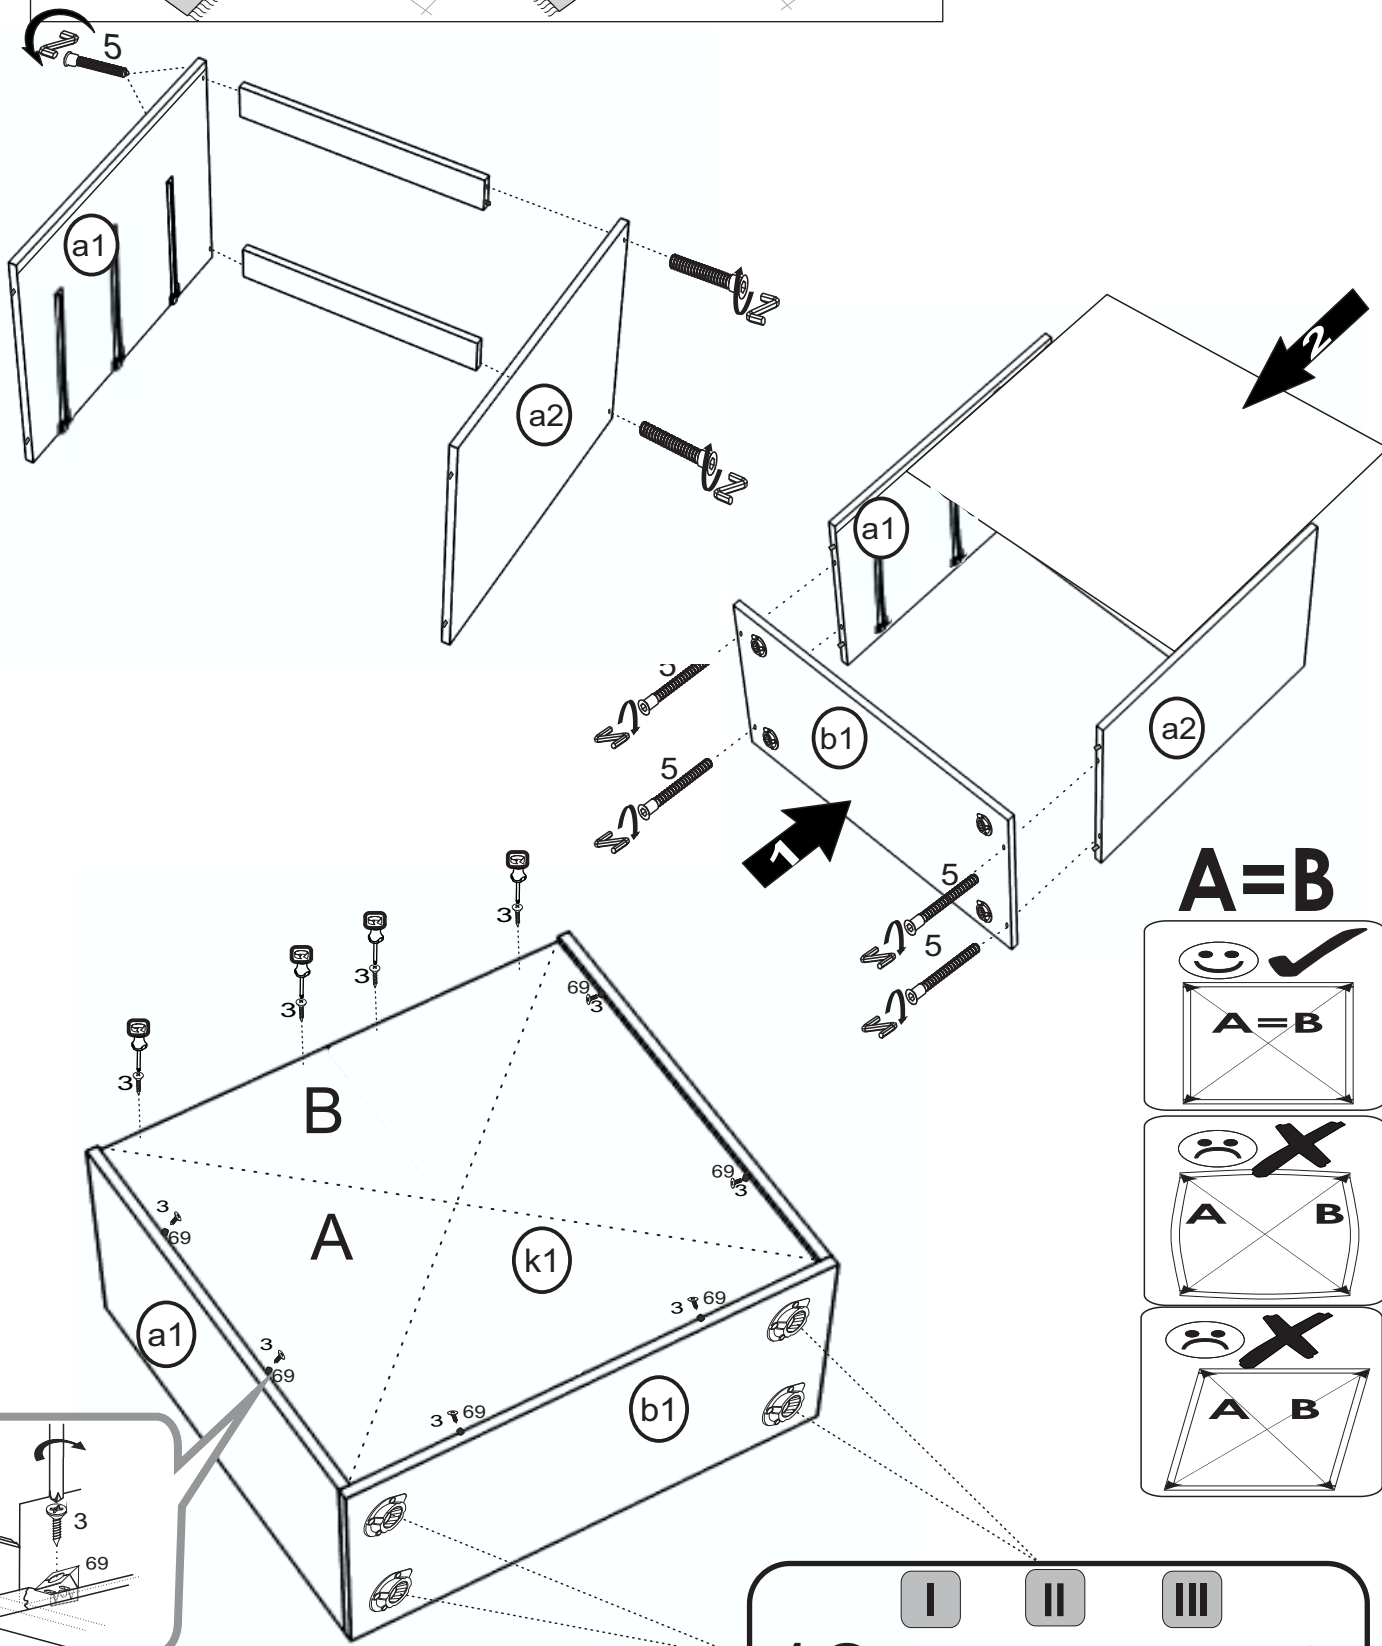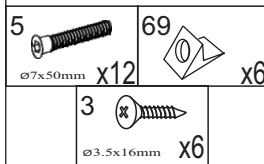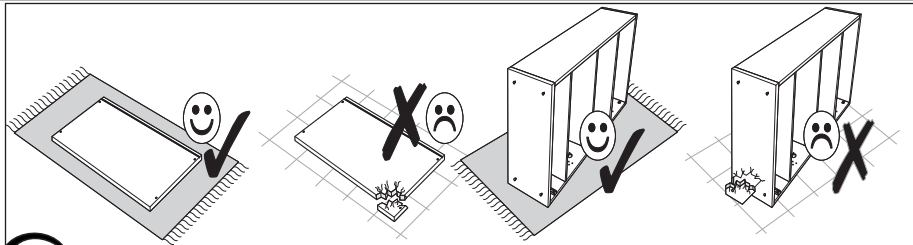

A=B

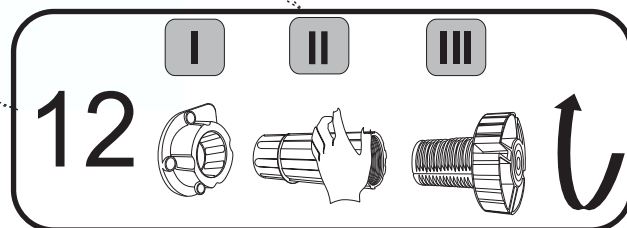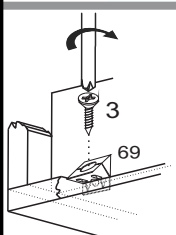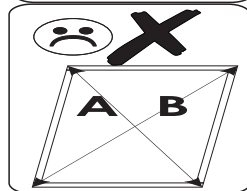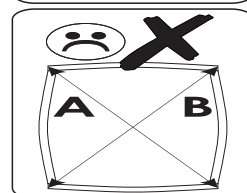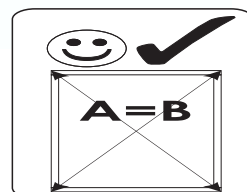

1		2		4		5		
	∅ 15x12mm	x4	6x45/34mm	x4	∅ 8x35mm	x4	∅ 7x50mm	x4

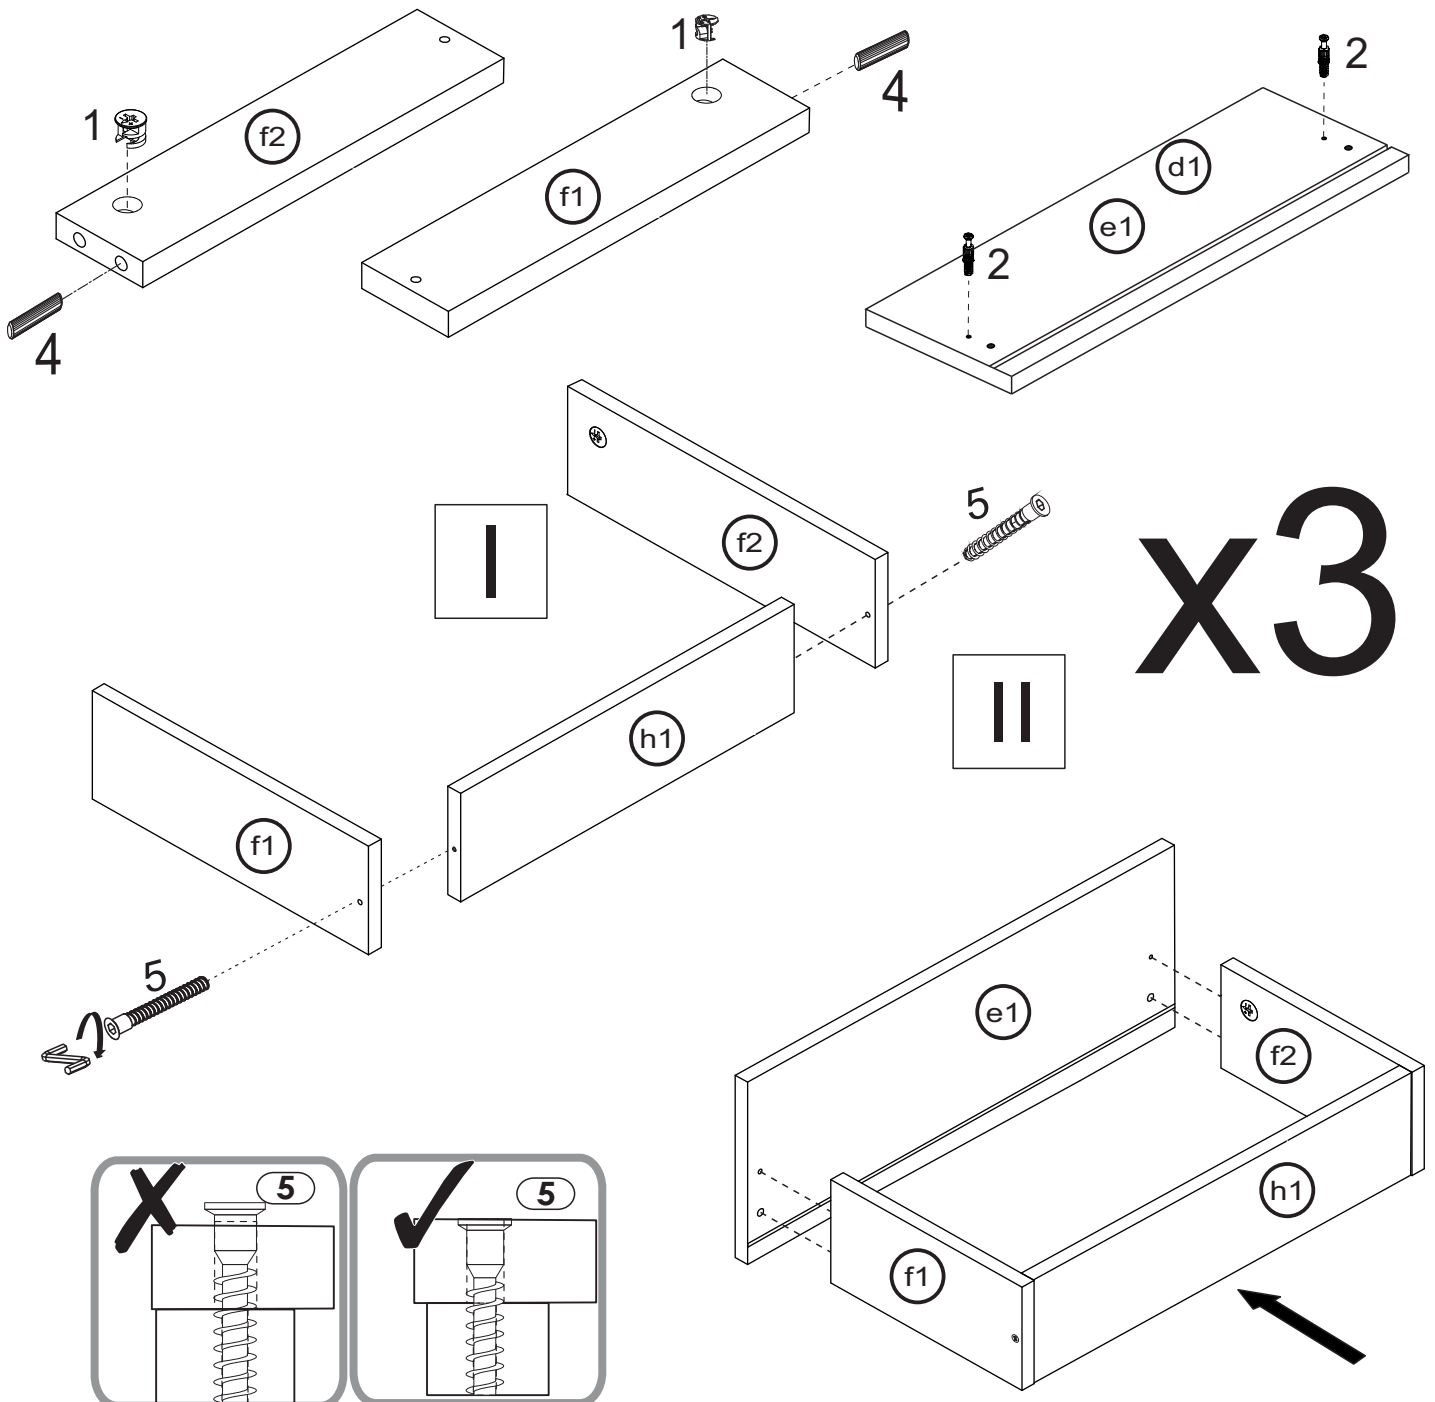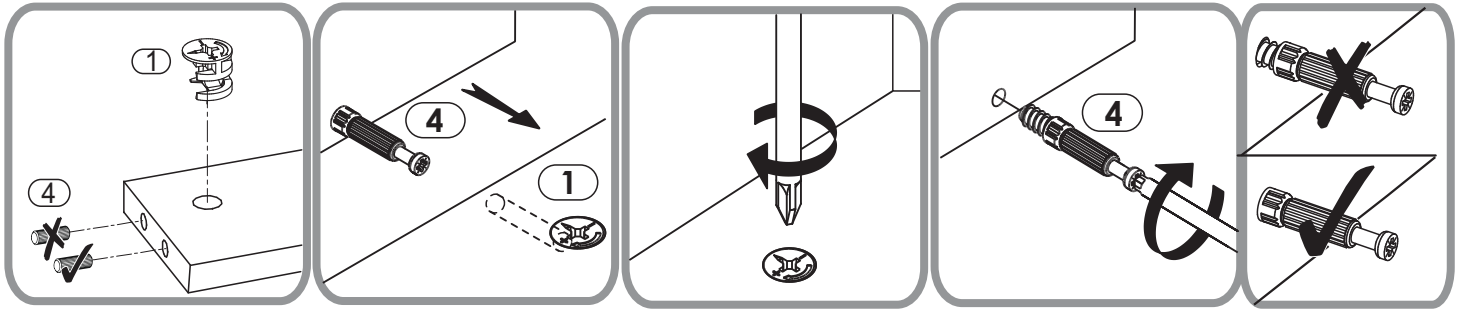

3 Ø 3.5x16mm x14	11 M4x20mm x4	24\DL 350 mm x2	24\RL 350 mm x2	86 128mm x2
------------------------	---------------------	-----------------------	-----------------------	-------------------

x3



A=B

