

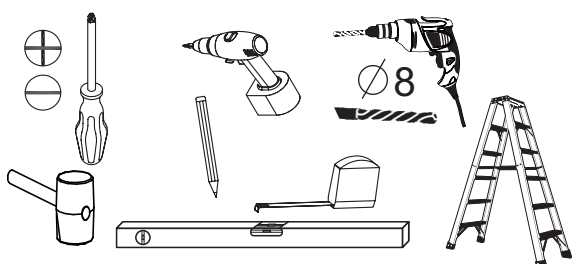
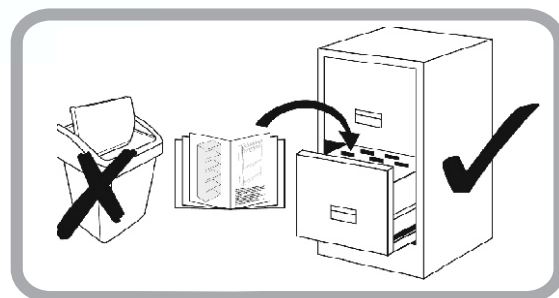
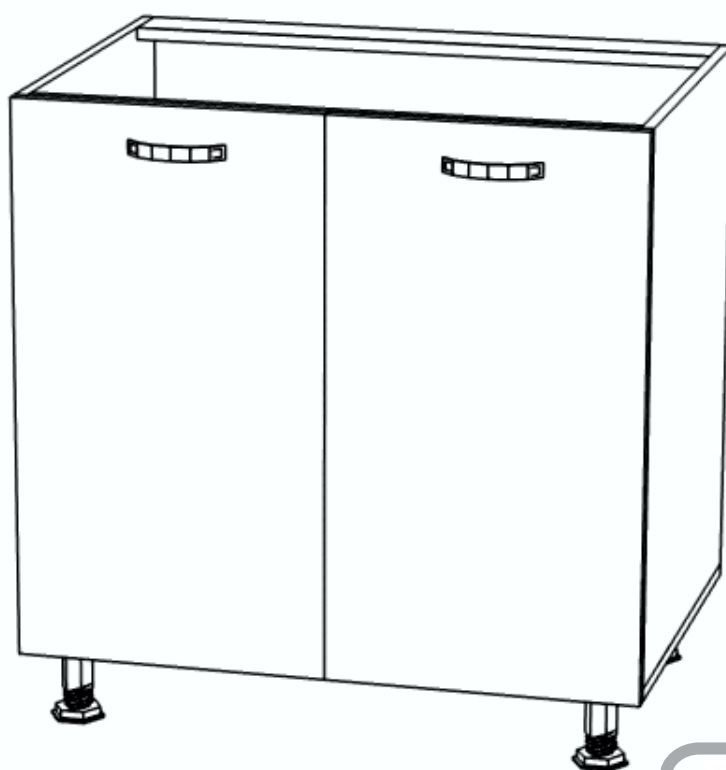
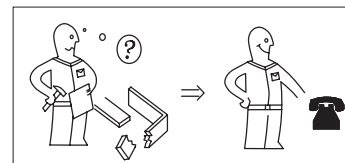
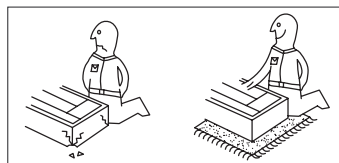
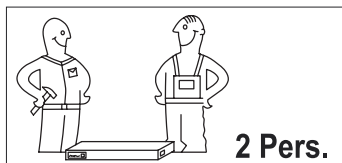


VALDY NEW

05860029 / 02

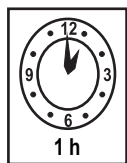

festziehen / tighten / Затягивать /
serrer / stringere / utåhnut / vasttrekken /
zategnuti / strângere / zwiázac / zacišn'æ
szorosan meghúzni / pevne dotiahnut' /
trdno pritegniti / затянуть / dra et

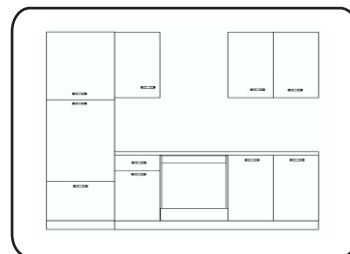

eindrücken / press in / enfoncer / wcisnąć
ribattere / zatlačit' / Вкаййте / indrukken
benyomni / stlačit' / vtisniti / tryck in
introducere prin apăsare / вдавить



ausmessen / measure / mesurer /
misurare / opmeten / izmeriti / mîara
kimérni / izmeriti / măsurare / измерить
změřit' / Измерете / mât upp / zmierzyc




drücken / press / presser / stisknout /
Натиснете vtisniti / nasinac / drukken /
pritisnuti / nacinac / pritisniti / нажать /
(meg)nyomni / apăsare / tryck fast / nacinac



einschlagen / hammer in / beverni / sla in
frapper au marteau / infossare / Zabit' /
zarazit' / Набийте / zabiti / wbić
introducere prin bătaie / забить / zatlouct











Drehen - wenden / przekręcić - odwrócić /
Keren - omdraaien / Girare - Ruotare /
Okrenuti - ubrnuti / Retourner - renverser /
Turn over - turn around / Otočte - obratite /
Завъртете - обърнете / Obrnite list /
Întoarceți - roțiți / Vrid runt - vänd /
прокрутить - повернуть / otočit' - obrátit
elforgatni - megfordítani

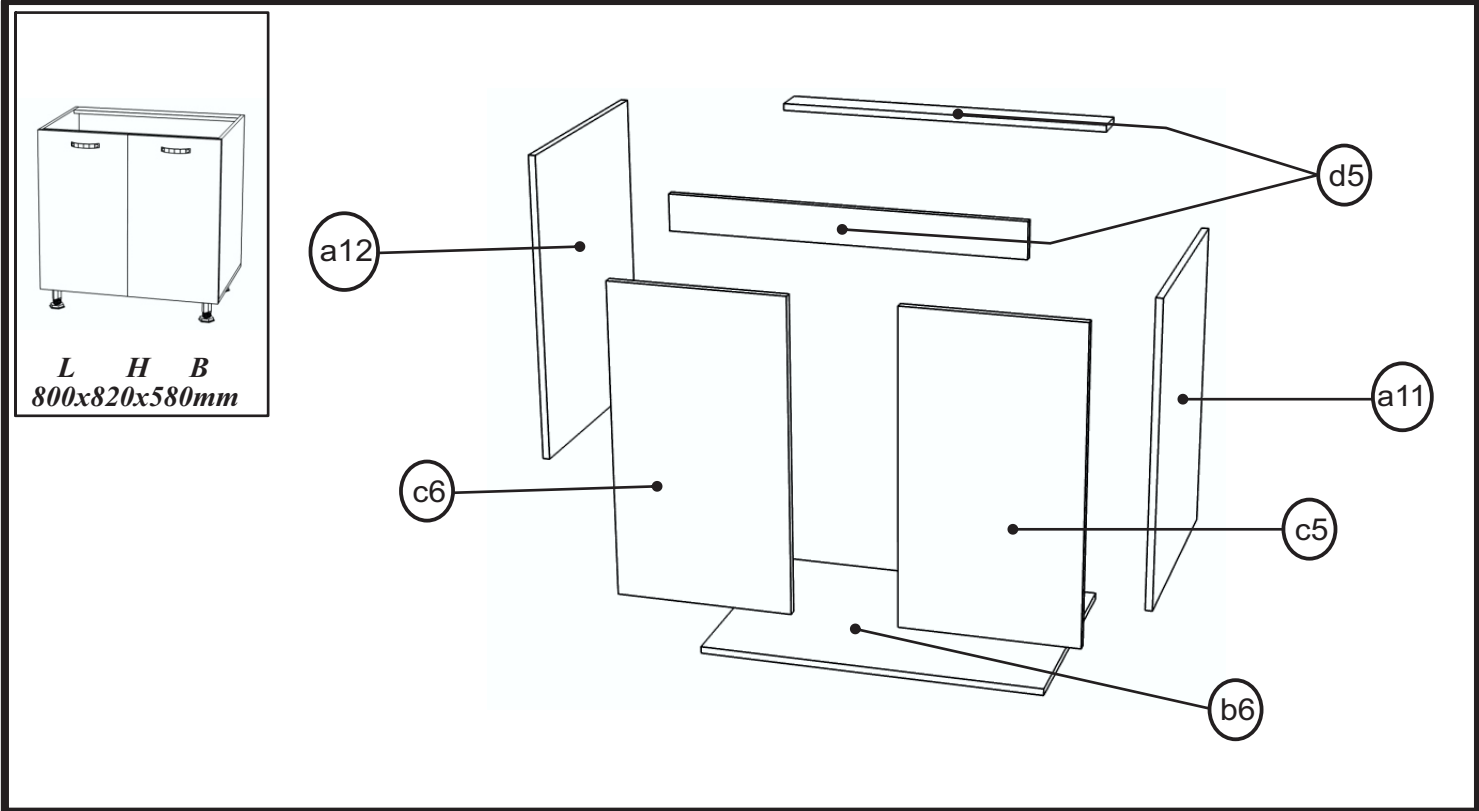





1	a11	704mm x 560mm x 16mm	1	5/8
2	a12	704mm x 560mm x 16mm	1	5/8
3	b6	800mm x 560mm x 16mm	1	5/8
4	c5	715mm x 395mm x 18 mm	1	5/8
5	c6	715mm x 395mm x 18 mm	1	5/8
6	d6	568mm x 80mm x 16mm	2	5/8

7 x4	10 Ø 6.3x11mm x8	12 x4	86 160mm x2	11 M4x20mm x4
2 6x45/34mm x6	1 Ø15x12mm x8	4 8x35mm x10	5 Ø7x50mm x6	13 x2
3 3.5x16mm x26	45 φ6x1mm 2x			

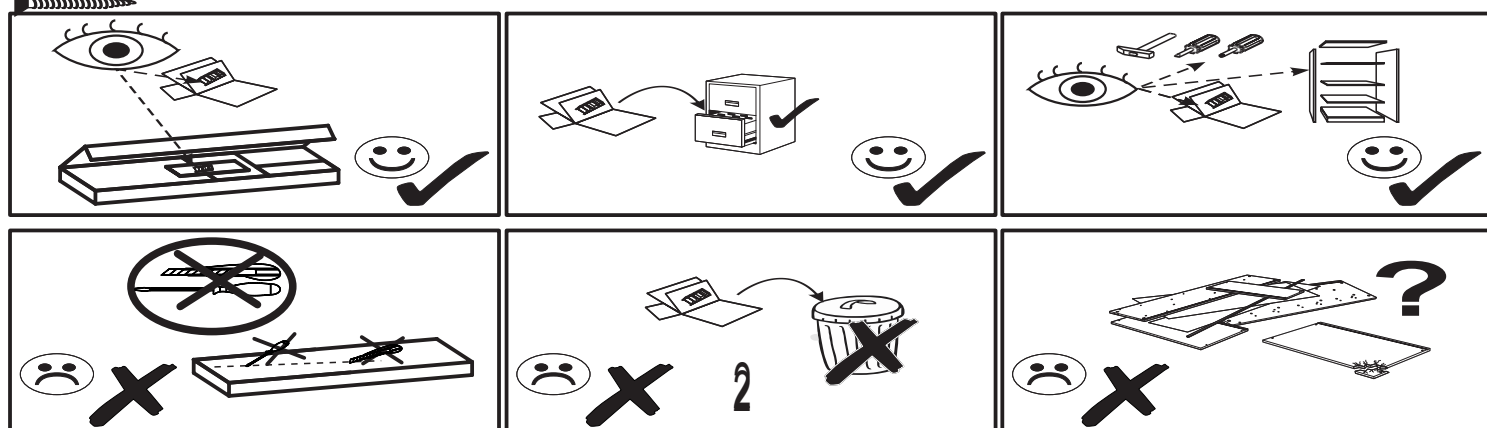

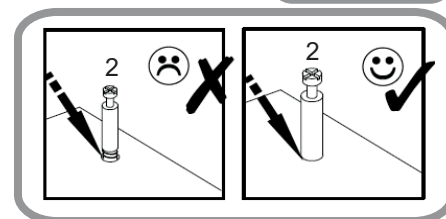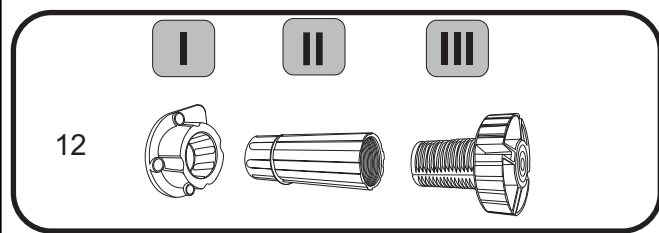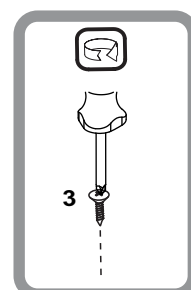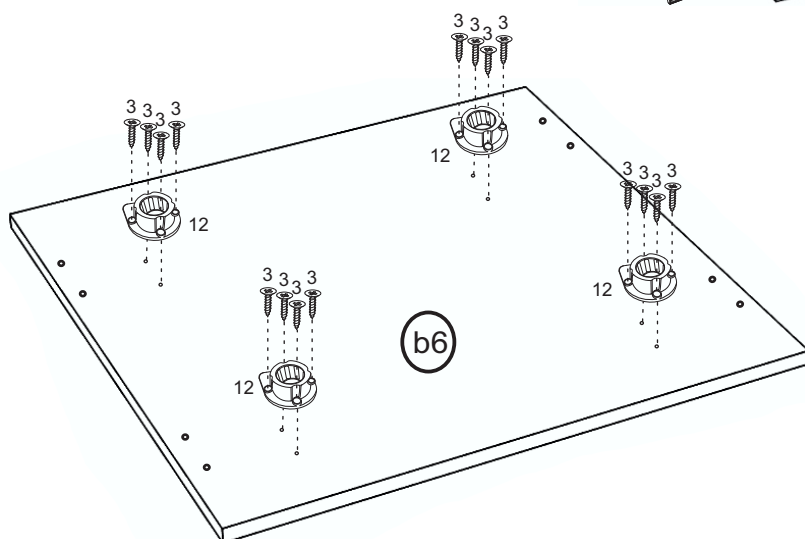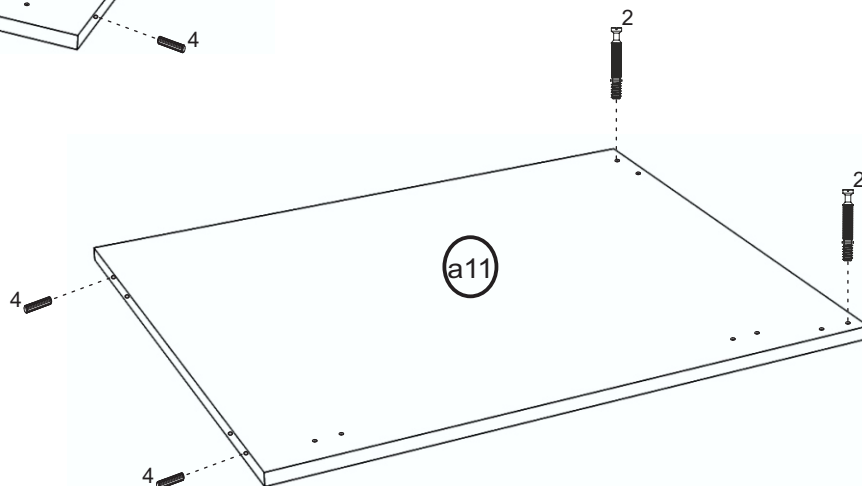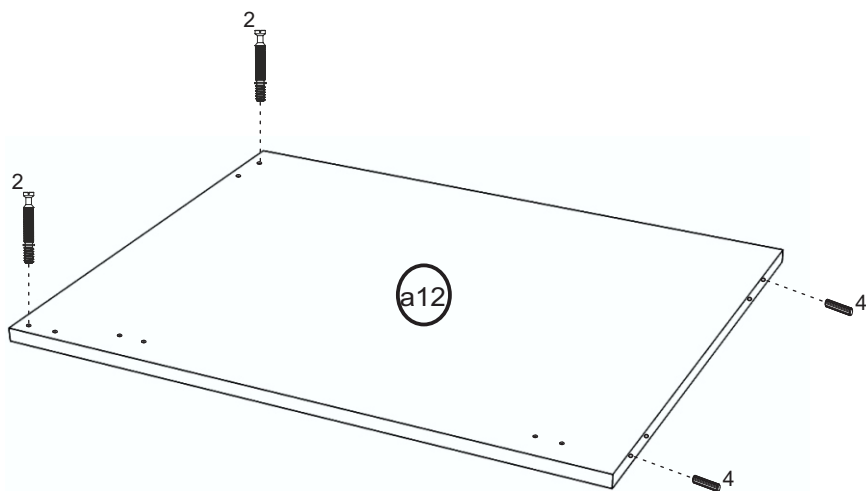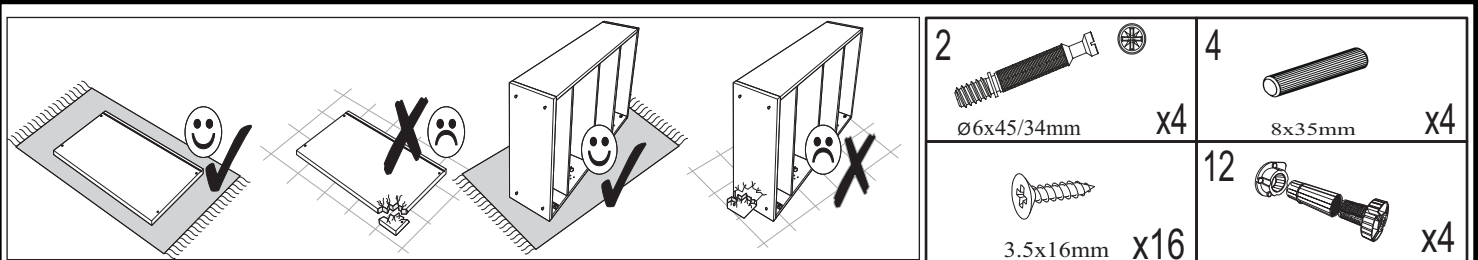

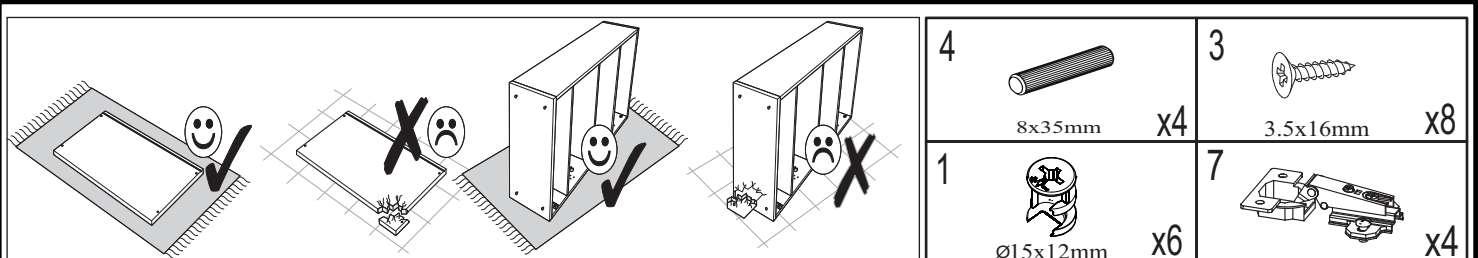

4	 8x35mm	x4	3	 3.5x16mm	x8
1	 Ø15x12mm	x6	7		x4
86	 160mm	x2	11	 M4x20mm	x4

