

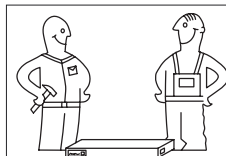
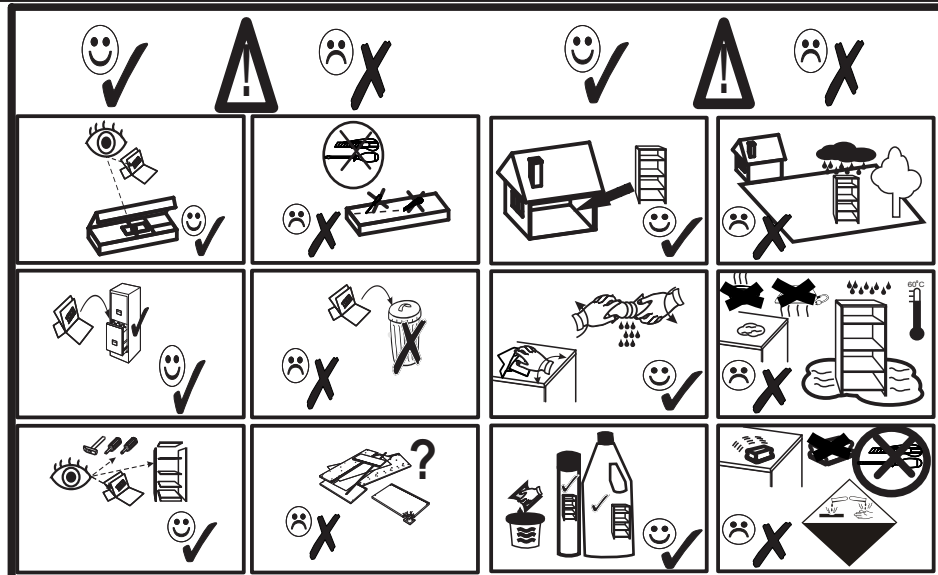
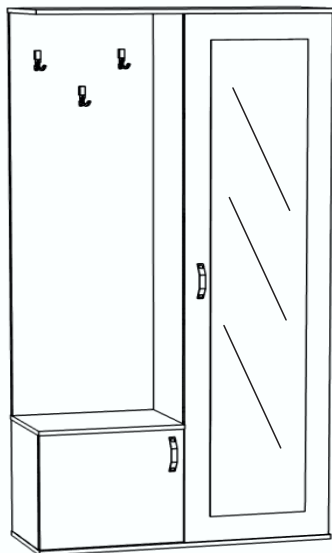


PREDSOBLJE 4

00000000 / 00

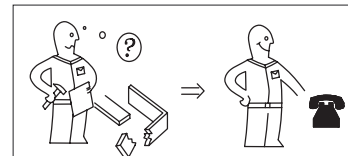



2 Pers.

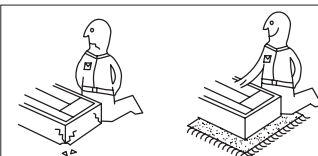

1 Ø15x12mm x8	2 Ø6x45/34mm x4	3 Ø3.5x16mm x60	4 Ø8x35mm x20	25 6x16x53mm x4
46 Ø15mm x8	7 x5	86 96 mm x2	10 Ø 6.3x11mm x10	39 3.5x20 x12
58 x8	5 x18	73 x4	134 450 x 12.5 x 7.5mm x1	49 φ7x84 mm x2
38 x3	00 IMBUS 4mm x1	11 M4x20mm x4	43 x1	16 Ø8x50mm x1
16 6x80mm x1				

0 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170 180 190

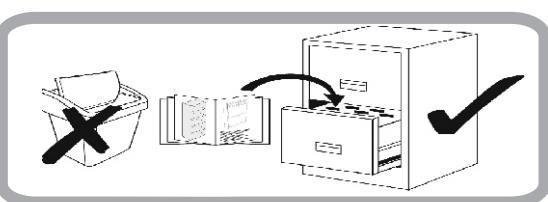

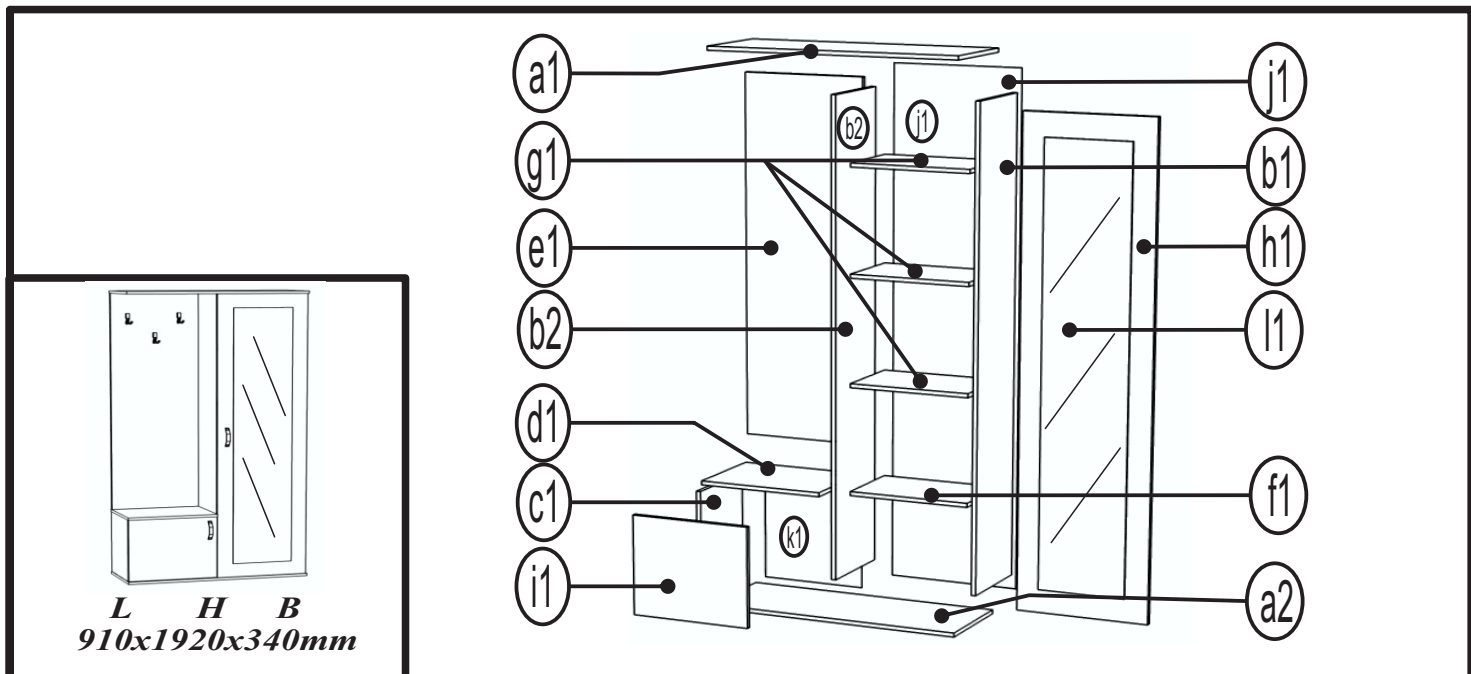

1	a1	910mm x 340mm x 16mm	1	1/1
2	a2	910mm x 340mm x 16mm	1	1/1
3	b1	1883mm x 320mm x 16mm	1	1/1
4	b2	1883mm x 320mm x 16mm	1	1/1
5	c1	413mm x 320mm x 16mm	1	1/1
6	d1	447mm x 340mm x 16mm	1	1/1
7	e1	1454mm x 445mm x 16mm	1	1/1
8	f1	429mm x 320mm x 16mm	1	1/1
9	g1	429mm x 300mm x 16mm	3	1/1
10	h1	1879mm x 457mm x 16mm	1	1/1
11	i1	410mm x 444mm x 16mm	1	1/1
12	j1	1911 x 450 x 3.2mm	1	1/1
13	k1	443 x 450 x 3.2mm	1	1/1
14	l1	1700 x 350 x 4mm	1	1/1

Positioning and securing of mirror
Montaza ogledala
Montaza ogledala

20Min.

1

Put the mirror on ground facing backside up and make sure that there is nothing below mirror

Postavite ogledalo na karton sa zadnje strane na gore i vrata sa prednje strane na gore proverite, da nema ništa ispod kartona

Postavite ogledalo na karton sa hrbtno stranjo navzgor, vrata pa postavite s prednju stranjo navzgor- proverite, da ni pod kartonom ničesar

2

Clean both mirror and panel from dust, dirt and oil

Očistite ogledalo i vrata od svih nečistoća

Očistite ogledalo in ploščo/vrata od umazanije, prahu, olja

3

Pill out the protection from the adhesive tape

Maknite zaštitu sa lepljine trake

Odstranite zaščito z lepljnega traku

4

Make sure that mirror is clean from dust, dirt and oil and then apply glue to mirror

Kad ste sigurni, da je sve čisto i suvo, dodajte lepljilo/silikon

Ko ste prepričani, da je površina čista in suha, nanesite lepljilo/silikon

5

Wait for 5 min. for glue to cure a little bit

Sačekajte 5 minuta, da lepljilo djelomično stvrdne

Počakajte 5 minut, da se lepljilo delno strdi

6

Gently turn over the mirror to the front of the panel that mirror need to be

Pazljivo okrenite ogledalo i stavite ga na prednju stranu vrata

Previdno obrnite ogledalo in ga položite na prednju stran vrat

7

Make sure that the distance is equal from all 4 corners of the panel

Proverite, da du svi razmaki jednaki i da ogledalo ne viri preko vrata


Prepričajte se, da so razdalje enake in da ogledalo ne glede preko vrat

8

Gently apply a low pressure on complete surface of mirror. Full cure time is 12 hours!

Pazljivo pritisnite na ogledalo na celoj površini. Sačekajte 12 sati da lepljilo sasvim stvrdne

Previdno pritisnite po celi površini ogledala. Počakajte 12ur - to je čas strjevanja lepila

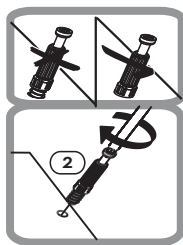

25 6x16x53mm x4	11 M4x20mm x4	86 128mm x2	7 x4	73 15x15x7mm x12	2 6x45/34mm x6	4 8x35mm x12	1 ø15x12mm x6
-----------------------	---------------------	-------------------	---------	------------------------	----------------------	--------------------	---------------------

